

RoeTest – Computer Tube Tester / Tube Measuring System

(c) - Helmut Weigl www.roehrentest.de

english translation by Gerhard Oed (thank you very much to him)

Installing the USB interface driver

Note: You must have administrator rights for all installations!

Windows 8:

Windows 8 has already a driver for the FT232RL on board. At connection the driver installs automatically.

Windows XP, Vista, 7:

Before installing the driver please unzip it to a temporary directory.

How to install the driver for the USB interface:

- Start your PC
- Insert the CD
- Connect the RoeTest with a USB connector to the PC (switch on the RoeTest, at least the relay supply must be present)

Now the PC should report that a new device was found (serial USB interface) and try to install the software for the device.

A screen will show up that lets you select the type of installation.

Select: "Install software from list or selected source"

Source: CD (or search manually for the driver's source ->CD->Treiber->USB)

Windows will ask a second time for the source of the driver. Please use the same location as above.

After the installation finishes windows will respond with "Hardware has been installed the device can be used now".

Check new serial port:

Goto system – devicemanager:

There must be a new COM port. If driver installed correct there is **no**

