


Options – Posting voltages:

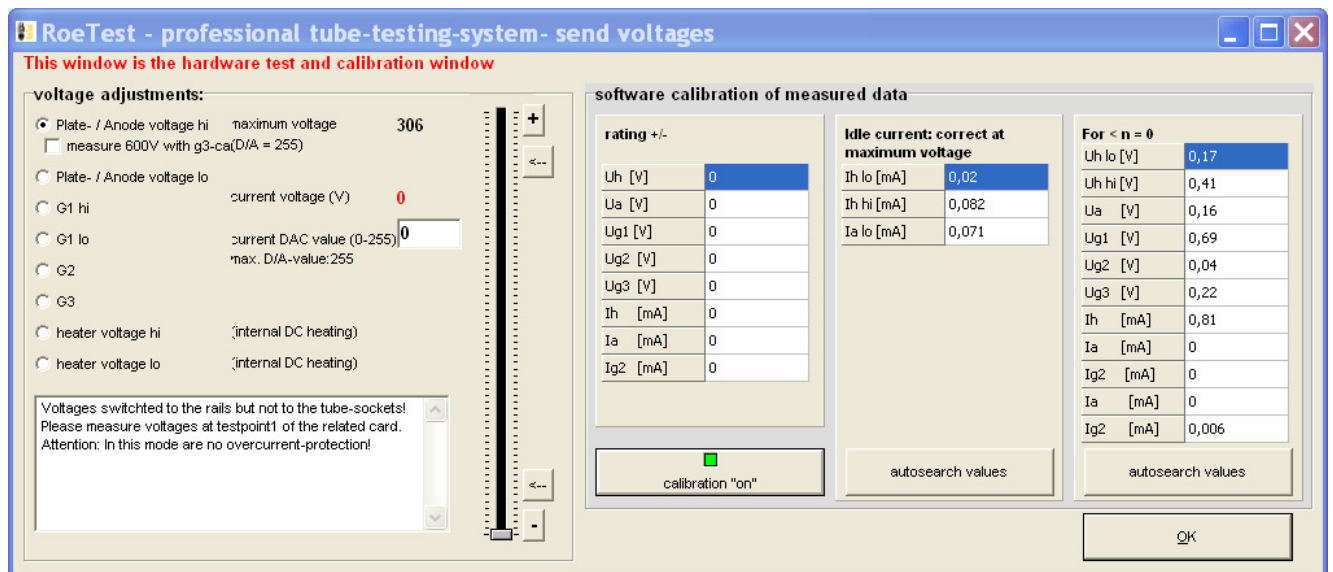

Used for testing and adjustment of the hardware (voltage sources and measuring instruments). The voltages must be measured at the boards, test point 1, using a multimeter (for adjustment see the building instructions). Those voltages are not switched to the tube holders.

The calibration values are used to compensate the offset of the operational amplifiers (measuring).

Caution:

The software short circuit test is disabled with this option. Please avoid short circuits. Please do not use low resistors at full anode current. The MOS-FETs could be damaged.

For adjusting the currents use a high resistive load (for example a lighting bulb). See also the adjustment instructions in the building instructions.